




We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 1-855-457-5683 information@lovethedrive.com

Mercedes 300, 500, 600 (MB 129) 1990 to 2002 Love The Drive Wind Deflector Install Guide

Your wind deflector will attach to your roll bar.



There are two rear brackets with straps that rap around the top of the roll bar.

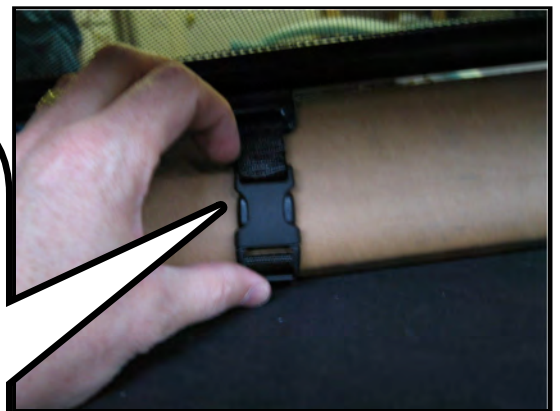

And two front brackets that attach to the top of the roll bar and groove on the bottom of the roll bar.



Start by putting our top down and moving your seats forward. Raise your roll bar up so you can reach the straps underneath.



Stand on one side of your car and place the wind deflector so the front brackets sit under the groove on the bottom of the roll bar on both sides.



Push the wind deflector back so the rear brackets touch the roll bar. The straps wrap around the roll bar and attach with a buckle. Pull the straps tight and then repeat on the other side.



Lower the roll bar back down and flip up the top pane of the wind deflector.



Your wind deflector folds flat when the roll bar is engaged.



You are now ready to Love The Drive.



If you have any questions or comments please let us know
1-855-457-5683 information@lovethedrive.com