



We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 1-855-457-5683 information@lovethedrive.com

Saab 900

1978 to 1993

Wind Deflector Install Guide

- * You can raise and lower your convertible top with the wind deflector installed.
- * The wind deflector will fit in the trunk when not in use.
- * Start by putting your top down.

Open both of the rear brackets to a 3/4 open position, as shown below. These brackets will sit just beside the rear head rests.



Raise both of the back head rests so that the rear bracket will be able to slide in and attach to the head rest posts.



Place the wind deflector into the back seat area. The front brackets will rest on the side trim panel and the rear brackets will rest on the back seat.




The front brackets sit beside the front seat belt housing. You may need to adjust the front brackets out by 1/8 of an inch, so that the brackets sit firmly on the trim panel. You will only need to do this once.



The rear brackets will rest on the back seat beside the head rests.



Turn the rear brackets so they lock into the head rest supports.

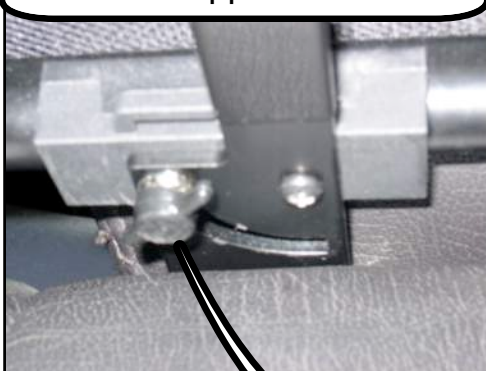

Make sure both brackets are locked into place on the headrest posts.



Turn the thumbscrews toward the drivers side (clockwise) to tighten and to the passenger side (counter clockwise) to loosen. When driving you must have both screws tight.

Attach the straps to the buckles under the front brackets. And then attach the silver hook to the bottom of the trim panel.



Pull the straps down snugly on both sides to hold in place.

