

Leather Armrest Pads for BMW Z3 Console Valet

Pre-installation notes:

- Installation should be at a temperature above 65° F.
- Thoroughly clean the surface of the console valet lids prior to application of the pads.

Installation Instructions:

1. Remove lids from console by detaching small O-rings at hinge location.
2. Place lids (topside up) on a flat surface to install lid covers. *figure 1 below*

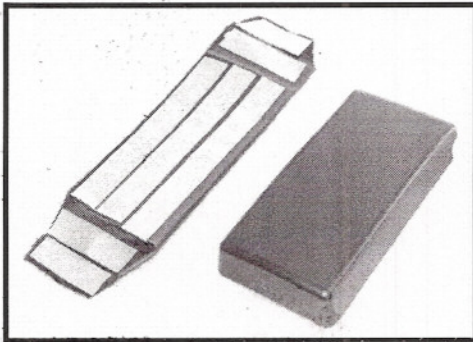


figure 1

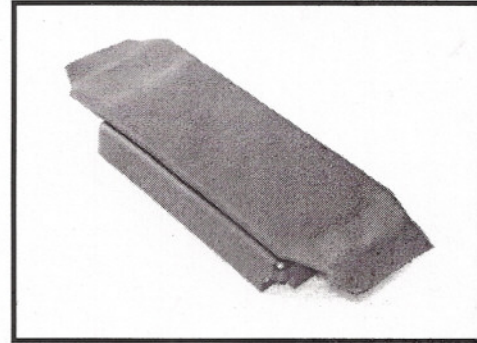


figure 2

3. Prior to removing the tape liner, practice the following steps. Once you are comfortable with the steps, proceed with the installation.
4. Remove tape from center area, line up the pad with the edges of the lids and press down firmly. *figure 2 above*
5. Remove tape liner from one end of the pad and pull it down over the end of the lid and wrap it under the edge. Keep pressure on the pad while wrapping to provide a tight fit and finish. *figure 3 below*

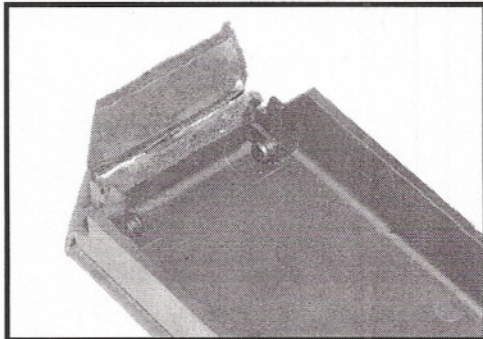


figure 3

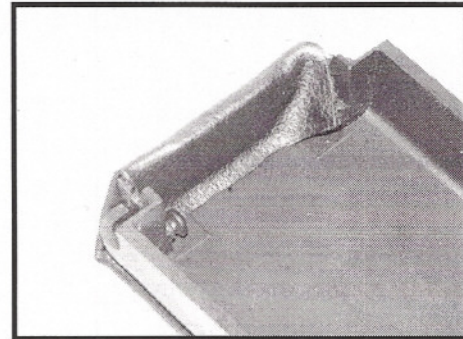


figure 4

6. Repeat step 5 for the other end. Press all areas of the leather pad to assure good adhesion to the lid. *figure 4 above*
7. Repeat steps 1 through 5 for the other lid.

Care and cleaning:

Pads can be cleaned and maintained with the same products used for the rest of your leather upholstery.