


INSTALLATION OF THUNDERBIRD TRAVELBOOT

1. Remove from case and place over top with snaps toward front of car.
2. With trunk lid open – place the two rear securing flaps in drain well area forward of the trunk seal. Only allow about 1" to overhang the drain well.

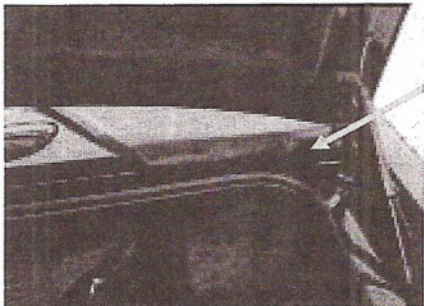

3. Slowly and gently close the trunk lid making sure the travelboot does not interfere with the trunk lid.
4. Pull the Travelboot forward until the front snaps can be secured. Expect a very snug fit.
5. Insert side flaps into the roof storage well.



6. Then slide center flap under the lip in front of the brake light as shown.

