



IF YOU HAVE ANY QUESTIONS FOR US
CONTACT US AT 1-855-457-5683 OR
BY EMAIL AT
INFORMATION@LOVETHEDRIVE.COM
OR WWW.LOVETHEDRIVE.COM

MUSTANG 1983 TO 1990 WIND DEFLECTOR INSTALL GUIDE

START BY PUTTING YOUR TOP DOWN

YOUR LOVE THE DRIVE WIND
DEFLECTOR FITS IN THE REAR
SEAT AREA OF YOUR MUSTANG
CONVERTIBLE



THE WIND DEFLECTOR ATTACHES TO YOUR
MUSTANG WITH TWO FRONT BRACKETS
AND TWO REAR BRACKETS. THE REAR
BRACKET IS ADJUSTABLE AND LOCKS THE
WIND DEFLECTOR IN PLACE.



STEP 1: THE REAR BRACKETS ARE ADJUSTABLE. START BUT LOSSENING THE THUMB SCREW. PUSH THE BRACKET SO IT IS 3/4 EXTENDED




STEP 2: HAVING PLACED THE PANEL IN THE REAR SEAT AREA. THE FRONT BRACKETS ATTACH TO THE REAR SIDE TRIM PANEL


STEP 3: WITH THE REAR BRACKETS EXTENDED THEY WILL SIT ON TOP OF THE SIDE OF THE REAR TRIM PANEL.



STEP 4: FROM UNDERNEATH THE WIND DEFLECTOR PULL BACK ON THE REAR BRACKET AND THEN TIGHTENED THE THUMB SCREWS HOLD THE WIND DEFLECTOR IN PLACE. REPEAT ON THE OTHER SIDE.

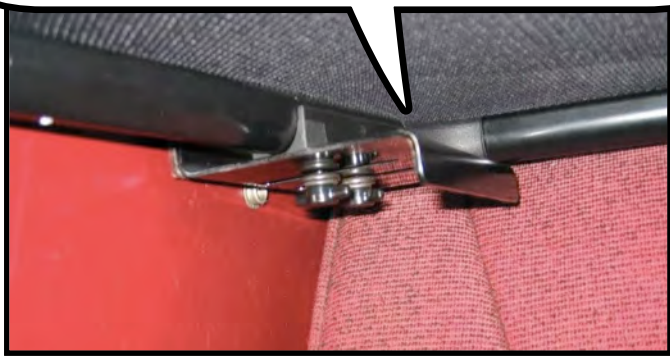

STEP 5: THERE ARE TWO STRAPS THAT ATTACH TO THE BOTTOM OF THE TRIM PANELS. THE BLACK HOOK WILL ATTACH TO THE BOTTOM OF THE TRIM PANEL

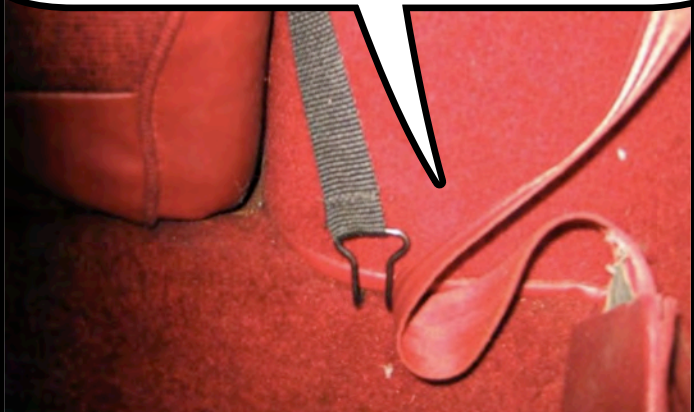

THE STRAPS WILL ATTACH TO THE BUCKLES ON THE BOTTOM OF THE WIND DEFLECTOR .

