




We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 1-855-457-5683 information@lovethedrive.com

Mustang 1994 to 2004

Love The Drive Wind Deflector

Install Guide

Step 1: When your wind deflector was shipped to you the front brackets needed to be rotated inwards so it would fit into the box. You will need to remove the three screws from the plastic on each side. You do not have to remove the fourth screw in the bracket.

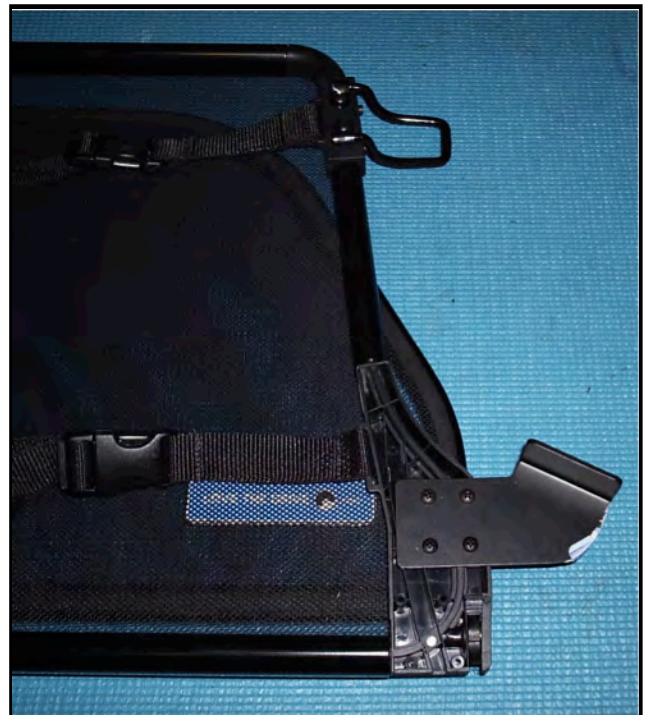

Step 2: You are now ready to install your wind deflector. With the top down, start by placing your hand underneath the front seatbelt strap.



Step 3: Lower then front bracket on one side into the hole and release the seatbelt strap. Repeat these steps on the other side.



Step 3 Cont: It is very important that the bracket sits UNDER the seatbelt strap.



IMPORTANT: NEVER ALLOW THE BRACKET TO SIT ON TOP OF THE SEATBELT AS SHOWN HERE.






Straps: There are four straps that come with your wind deflector. Two with silver hooks for the front and two with black snap hooks for the rear.


Step 4: The front silver hooks attach to the bottom of the trim panel behind the seatbelt retractor on the floor. Then it clips into the strap above, near the front bracket.



Step 4 Cont: The rear black snap hooks attach to the bottom of the trim panel beside the backseat. There is a small square cut out for the hook. Insert the black snap hook here.

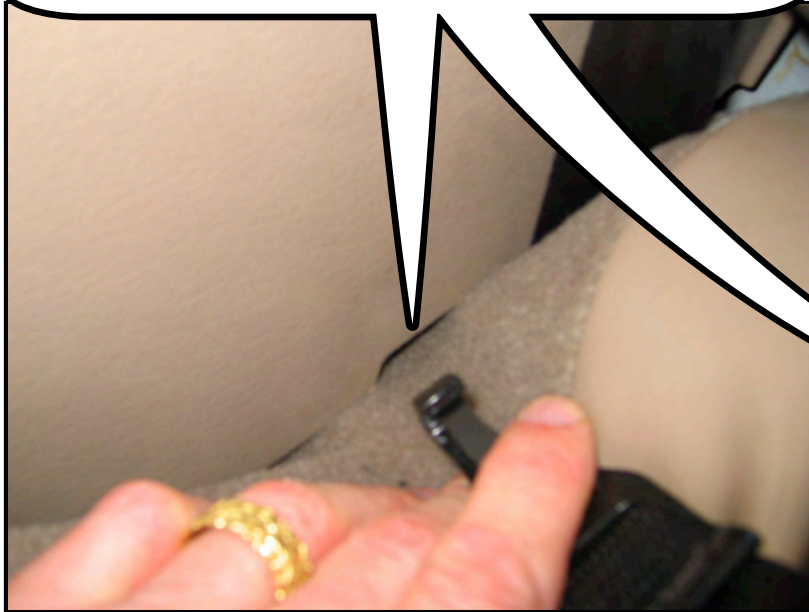

Step 4 Cont: The black snap hook straps then clip into the strap attached at the rear bracket.

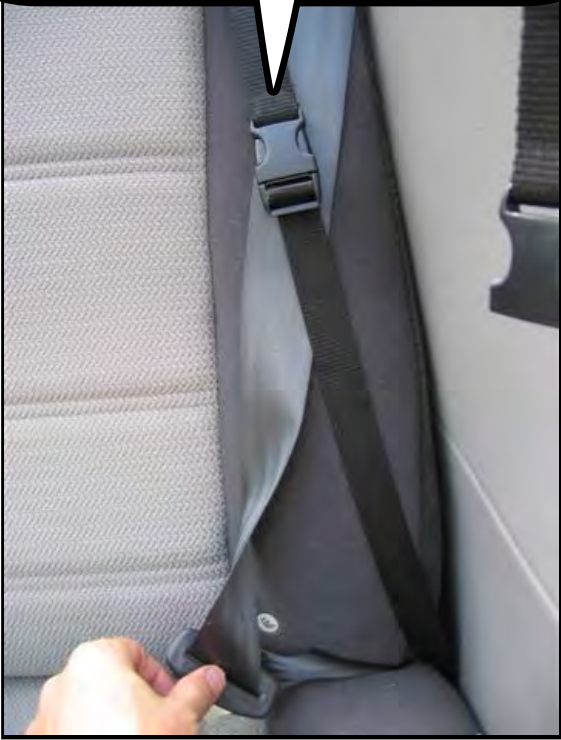

You are now ready to...

