




We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 1-855-457-5683 information@lovethedrive.com

Saab 9-3 900SE/NG 1994 to 2003 Wind Deflector Install Guide

- * You can raise and lower your convertible top with the wind deflector installed.
- * The wind deflector will fit in the trunk when not in use.
- * Start by lowering your top and leaving the lid up.

Open both of the rear brackets to a half open position, as shown below.
And then place the wind deflector into the back seat area of your car.

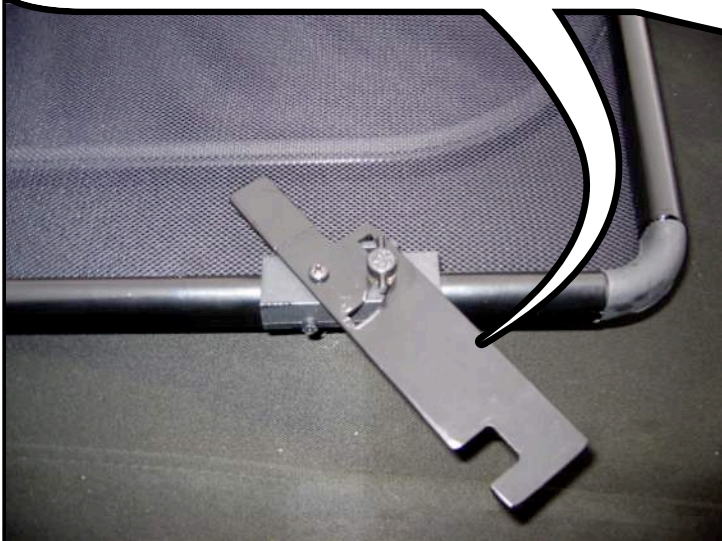


The front bracket sit just behind the seat belt cover.



The rear brackets will rest on the back seat.



Turn the rear brackets so they lock into the headrest supports.

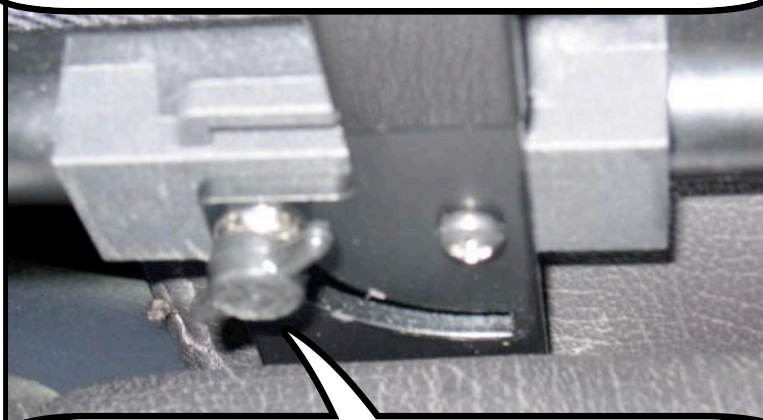

Make sure both brackets are locked into place on the headrest posts.



Tighten the lock nut on both sides. Turn the lock nut toward the drivers side to tighten and passenger side to loosen.



Attach the silver hook straps to the trim panel straight down, just behind the seat belt base. Then pull both straps down snugly.

