



We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 1-855-457-5683 information@lovethedrive.com

# Solara 2005 to 2010

## Love The Drive Wind Deflector


### Install Guide

Start by putting your top down. Have a friend help you install the wind deflector the first few times. After that you will be able to easily install and remove your wind deflector by yourself in minutes.



Your Love The Drive wind deflector covers the back seat area of your Solara.



Once installed your wind deflector is held in place by two spring plungers in the back and two brackets in the front. (There are also two straps which aren't shown in the photos below)

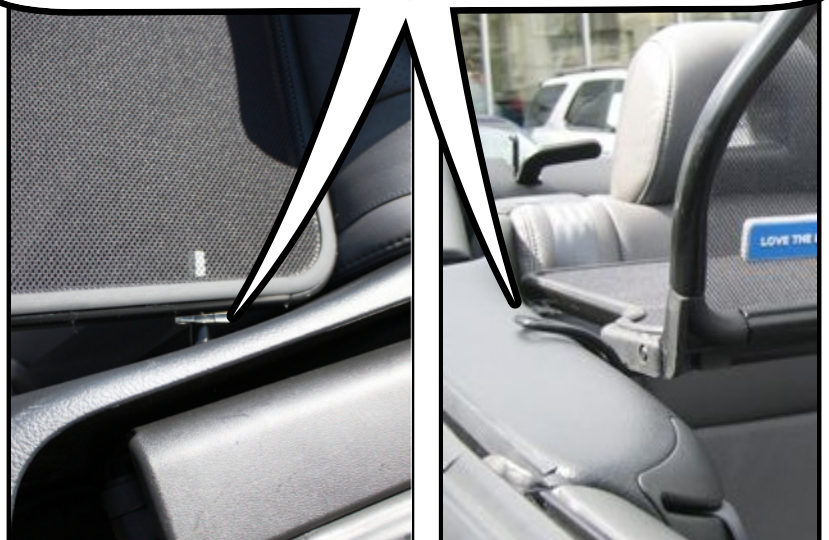

Step 1: Your wind deflector attaches to the small holes in the rear trim panel. There are two "L" handled spring plungers. The "nose" of the plungers will go into the holes. Start with the plungers in the closed position as shown in the top right photo.

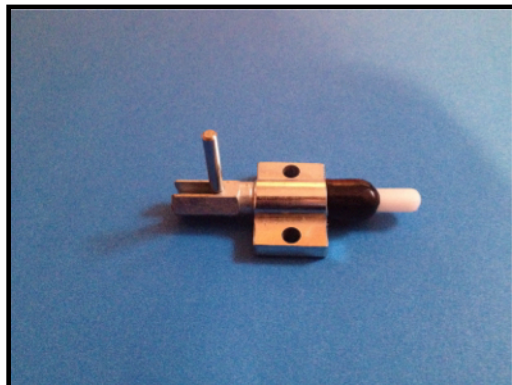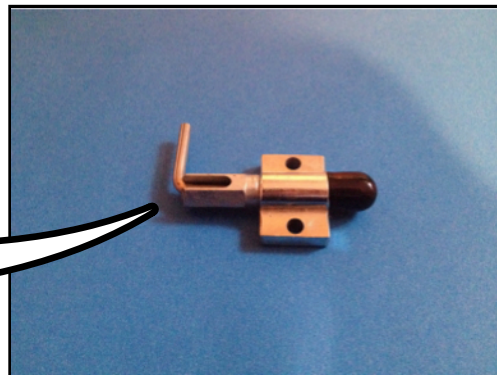

Step 2: Lower the wind deflector into the back seat area. While still holding on the back of the wind deflector, line up the plunger with the hole in the trim panel.



Step 3: Turn the handle to release the plunger, the nose will enter the hole and hold the wind deflector in place. Repeat this on the other side.



Step 4: The two front brackets will rest on the top of the trim panel.



Step 5: There are also two straps that attach to the bottom of the trim panel (below the back seat) and then to the buckle under the front brackets.

