



IF YOU HAVE ANY QUESTIONS
PLEASE CONTACT US BY PHONE AT
1-855-457-5683 OR BY EMAIL AT
INFORMATION@LOVETHEDRIVE.COM
OF WWW.LOVETHEDRIVE.COM

MERCEDES 230 SL 250SL 280SL (1964 TO 1971) WIND DEFLECTOR INSTALL GUIDE

START BY PUTTING YOUR TOP DOWN

YOUR WIND DEFLECTOR
ATTACHES TO THE LID THAT
COVERS YOUR CONVERTIBLE
TOP




THE MB 113 WIND DEFLECTOR
ATTACHES WITH THE TWO
BRACKETS IN THE REAR AND TWO
LATCHES IN THE FRONT






START BY LAYING YOUR WIND DEFLECTOR ON TOP OF THE LID THAT COVERS YOUR CONVERTIBLE TOP

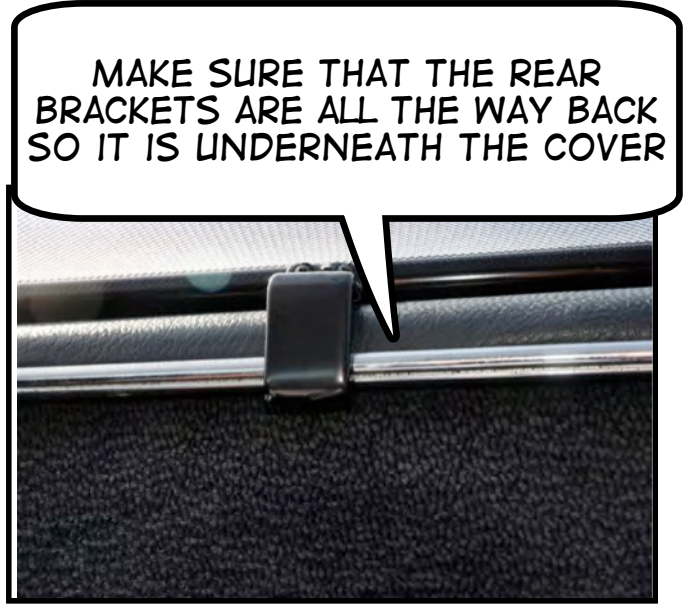


MAKE SURE THAT THE REAR BRACKETS ARE ALL THE WAY BACK SO IT IS UNDERNEATH THE COVER


THE FRONT LATCHES ATTACH UNDERNEATH THE CHROME TRIM. UNLATCH THE LATCHES AND LET THEM HANG DOWN

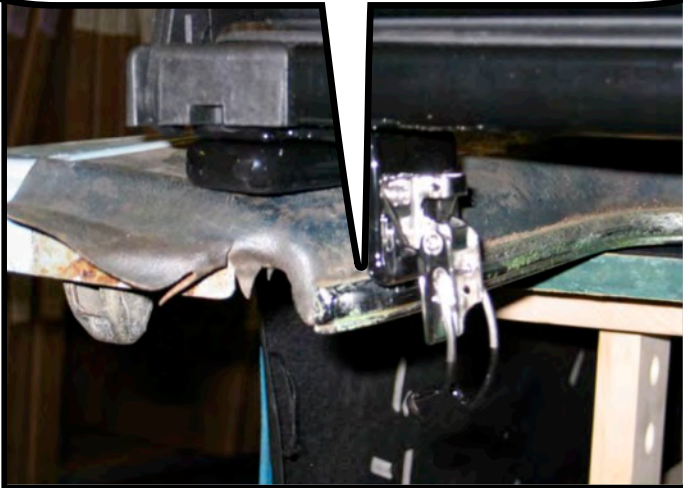

START BY PLACING BOTH LATCHES UNDER THE CHROME TRIM ON BOTH SIDES

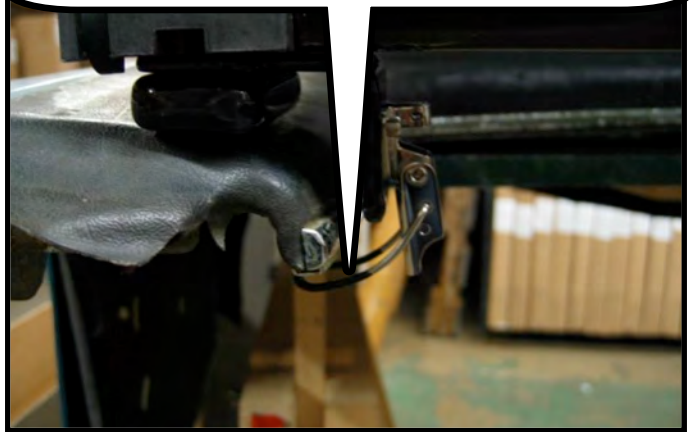

NEXT FLIP THE LATCHES UP ON EACH SIDE SO THEY LOCK THE WIND DEFLECTOR INTO PLACE.

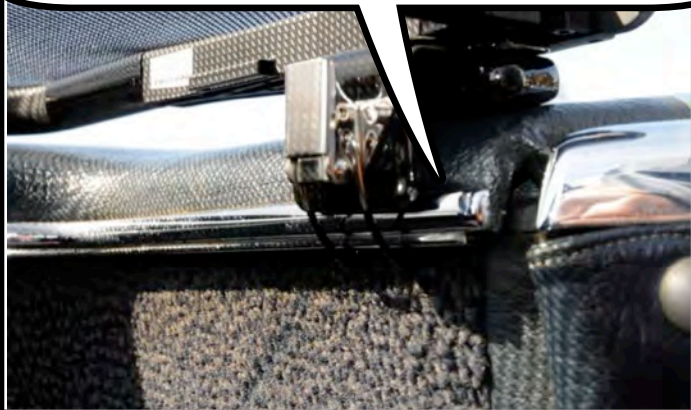

NEXT FLIP UP THE TOP PANEL AND YOU'RE READY TO GO. YOUR WIND DEFLECTOR STORES IN A STORAGE BACK WHEN NOT IN USE

