



ATTACHMENT PROCEDURE

Please read these instructions completely before beginning this procedure.

1. After installing your choice of lifting system, lower the pulley snap link to within a few inches of your hardtop.

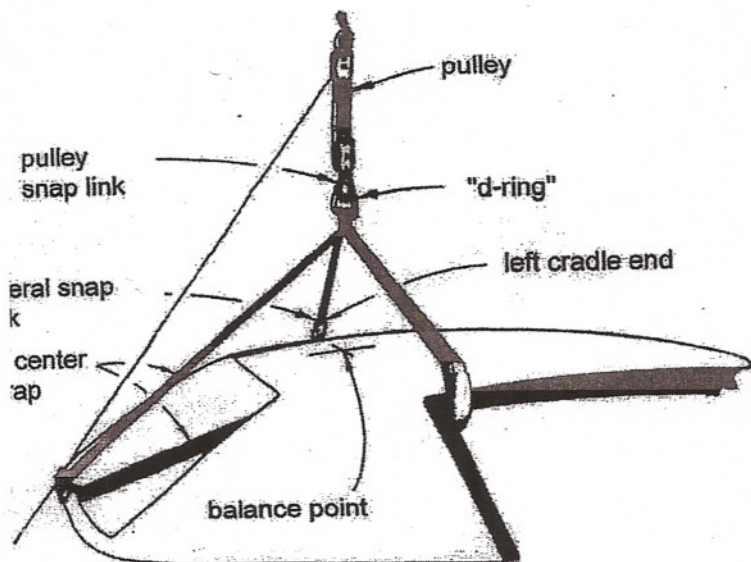

2. The harness assembly has self closing snap links at each end of the support cradle. Disconnect these snap links. Place the cradle behind the seats, check to see that the 2" strap is centered. Release the hardtop from your car following the instructions in your owner's manual. When you've determined that the top is completely disconnected, including the electrical connection for the rear window defroster, slide the disconnected end of the strap assembly under the rear window and out onto the rear deck (a small soft cloth will protect paint at this point). Re-connect the snap links to the ends of the support cradle making sure there are no twists. When this is complete the "d-ring" sewn into the strap assembly will be over the balance point of your hardtop. Your car should be parked so that the d-ring is precisely below the suspended pulley snap link.

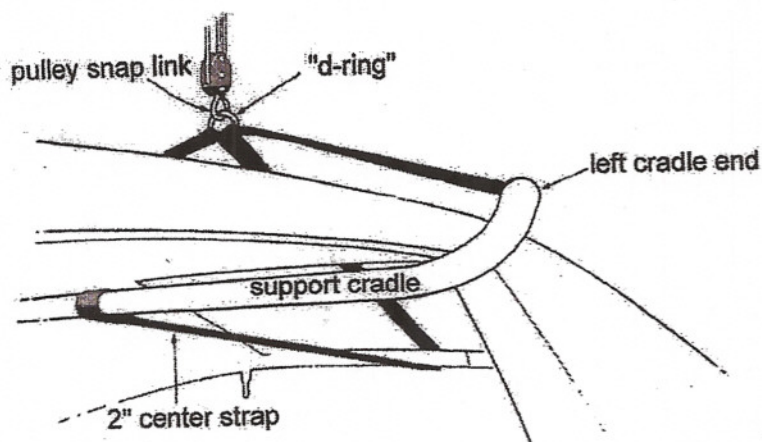

3. Your hardtop is now ready to be lifted from your car. Raise the top from the car while steadying the it to control any lateral motion until the top is well above the car. Raise the top until it is high enough to be stored and secure the lifting system you chose.



imc
1839 NW 515th Road
Kingsville, MO 64061