

# Installation Instructions for Z4 Armrest Pad

1. Lift parking brake handle to maximum height.
2. Remove parking brake trim collar by gently lifting a corner of the back edge of collar. Release the locking clips by applying a slight outward pressure on the clips, working your way around the perimeter to release the trim collar from the console. Once all the clips are disengaged, pull the collar up from back to front. See figures 1 and 2.



Figure 1

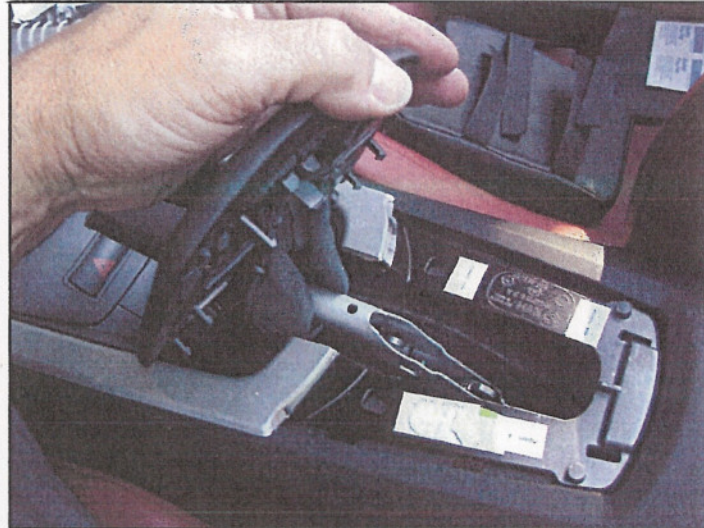


Figure 2

3. Place pad on top of trim cover, aligning the straps to the inside of the locking clips as shown in figures 3 and 4. To minimize pad movement, straps should be tight. Check pad for even alignment on trim collar (front to back and side to side).



Figure 3

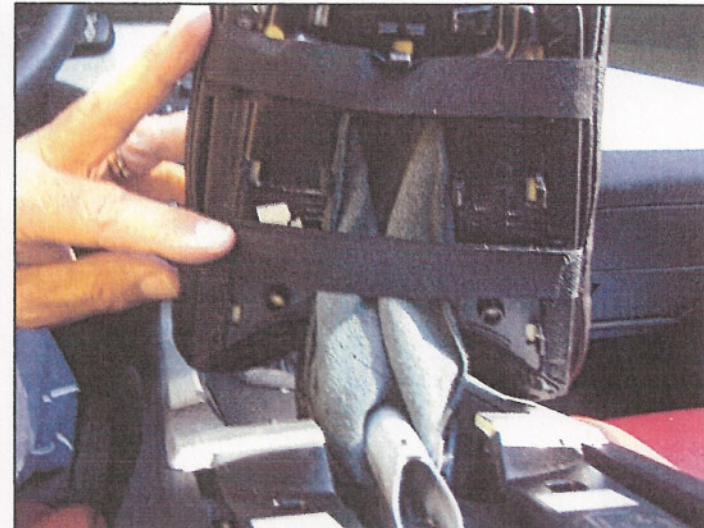


Figure 4

4. Reinstall the parking brake trim collar (with pad attached) by aligning the locking clips with the proper holes and pressing back into place.

The Z4 armrest pad can be cleaned and preserved with standard automotive interior cleaners and protective products.

## Z4 Armrest Installation Information

The armrest pad is simple to install and should easily fit with or without the u-shaped pad (as shown in Figure #1). If you do not have the u-shaped pad, the boot for the handbrake will lift up and the Velcro straps will secure under it (as shown in Figure #3). Then simply replace the boot back in it's original place.

When the handbrake is fully applied (up position) it should not effect the position of the installed armrest. If there is a clearance problem that could be a sign that your emergency brake may be in need of an adjustment. This adjustment should only be made by a qualified BMW technician according to factory specifications.