





# Installation Instructions

## Z4 Roadster (E85-US) Brushed Finish Trunk Handle

Part Number 82 12 0 153 357

### PROCEDURE:

NOTE: PLEASE REVIEW ALL INSTRUCTIONS CAREFULLY BEFORE BEGINNING THIS INSTALLATION. TRUNK HANDLE AND VEHICLE SHOULD BE AT 70 DEGREES F FOR OPTIMUM ADHESIVE BONDING. ADHESIVE WILL ATTAIN 75% BOND STRENGTH IN 24 HOURS, AND WILL ATTAIN FULL BOND STRENGTH IN 72 HOURS.

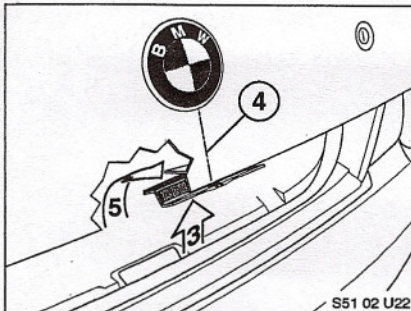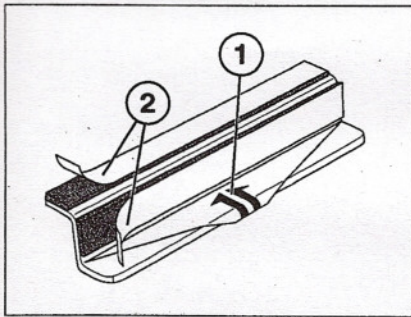

1. Open trunk to access mounting area.
2. Test fit trunk handle under lip of trunk lid. (Do not remove the adhesive backing at this time) The centering decal (1) on the handle must align with the centerline of the BMW Roundel trunk emblem. (Hint: A strip of masking tape can be a useful visual guide.)
3. Thoroughly clean mounting area with isopropyl alcohol.
4. Remove backing from adhesive strips. (2)
5. Position trunk handle so that only the 90-degree inside bend of the trunk handle contacts the trunk lid edge (3). Do NOT allow the adhesive to touch the mounting surface yet.
6. Align the centering decal with the centerline of the BMW Roundel trunk emblem (4)
7. Carefully pivot the handle into place (5) and press the adhesive backed portions of the trunk handle firmly against the inner trunk lid surfaces.
8. Remove centering decal.